



1 Power Outlets	4 Mounting Plate Release	7 Charging Port	10 Battery Status Indicator
2 Power Switch	5 Ground Port	8 2A USB Port	11 Power Converter
3 Mounting Plate	6 30A Fuse	9 Battery Lock	12 Battery Pack

Removing the Battery Pack		Attaching the Battery Pack			
<ol style="list-style-type: none"> Slide the Battery Lock 9 toward the outside edge of the Power Converter 11 until it reaches the end of the slider. Pull the Battery Pack 12 and the Power Converter 11 apart at the center seam between the plug interface and Charging Port 7. 		<ol style="list-style-type: none"> Align the slots in the bottom of the Battery Pack 12 with the hooks at the bottom of the Power Converter 11 and press the halves together until the red / black contacts at the top intersect. Slide the Battery Lock 9 away from the outside edge of the Power Converter 11 until it reaches the end of the slider. 			
Power Converter Operation		Charging the Battery Pack			
<ol style="list-style-type: none"> With the Battery Pack 12 inserted firmly in the Power Converter 11 toggle the Power Switch 2 from "O" to "I" to turn the unit on. Battery life is readable from the Battery Status Indicator 10 on the Power Converter 11 while the Nomad is powered on. <ul style="list-style-type: none"> • 3 dots = 50-100% • 2 dots = 33-50% • 1 dots ≤ 33% 		<ol style="list-style-type: none"> Disconnect the Battery Pack 12 and remove the larger side of the protective rubber plug from the Charging Port 7. Insert the end of your Nomad charger into the Charging Port 7. The LED on the Nomad charger transformer pack will glow red while charging, and turn green upon completion. Charging will take approximately 3.5 hours to fully charge one Battery Pack 12. 			
Attaching Mounts & Clamps		Removing Mounts & Clamps		Replacing the Fuse	
<ol style="list-style-type: none"> Locate the Mounting Plate 3 and align the brackets of your clamp or mount with the holes on the plate. Press the brackets of your clamp or third-party mount into the holes of the Mounting Plate 3 and slide it toward the Power Outlets 1 until it clicks. 		<ol style="list-style-type: none"> Press the Mounting Plate Release 4 down and slide the brackets of your mount away from the Power Outlets 1. Pull up on the clamp or mount and remove it from the Mounting Plate 3. 		<ol style="list-style-type: none"> Set the Power Switch 2 to the OFF ("O") position and remove the Battery Pack 12. Firmly grip the 30A Fuse 6 with your fingers or pliers and pull up to discard. Take a new 30A fuse (included) and carefully press it straight into the 30A Fuse slot 6 until the base of the plastic sheath sits flush with the device. 	

Information and Downloads

Visit our website at www.interfitphotographic.com for a downloadable digital version of this guide and additional information about the Nomad, as well as many other exciting Interfit photo and video products to light your creativity.